

# Cat-X DVI-D + Audio Extender Family

DVS-102C  
DVS-104C  
DVS-108C  
DVIE-101T  
DVIE-101R  
DVS-AR  
DVS-DR

## User Manual

◀ V1.0 ▶



[www.green-box.com.tw](http://www.green-box.com.tw)

[www.data-av.com](http://www.data-av.com)

# Contents

<b>1. Package Content .....</b>	<b>3</b>
<b>2. Product Introduction.....</b>	<b>3</b>
<b>3. Product Features.....</b>	<b>4</b>
<b>4. Panel Descriptions .....</b>	<b>5</b>
<b>5. Installation and Operation. ....</b>	<b>8</b>
<b>5.1 Install Single-Port Transmitter and Receiver .....</b>	<b>8</b>
<b>5.2 Install Multi-Port Transmitter .....</b>	<b>11</b>
<b>5.3 To connect monitors and speakers through RJ-45 and RJ-11         ports.....</b>	<b>11</b>
<b>5.4 Stack More Transmitters to Have More Displays .....</b>	<b>13</b>
<b>6. Specifications.....</b>	<b>14</b>
<b>7. Remarks.....</b>	<b>15</b>
<b>8. Notice .....</b>	<b>15</b>
<b>Certifications.....</b>	<b>16</b>

## 1. Package Content

**The DVI-D Audio Splitter package consists of followings items:**

- 2/4/8-Port DVI-D Audio Transmitter x 1
- DVS-180AT DVI + Audio Integrated Cable 1.8M x 1
- Power Adapter (DC 5V) x 1
- Rack Mounting Kit x 1
- User Manual x 1

### **Optional Products (Sold Separately)**

- DVIE-101R DVI-D Long Range Receiver
- DVIE-101T One Port DVI-D Transmitter
- DVS-DR DVI-D Short Range Receiver
- DVS-AR Audio Receiver

## 2. Product Introduction

The Cat5/5e/6 DVI-D + Audio Extender consist of a transmitter and a receiver. This pair can extend your DVI-D and audio signal over Cat5/5e/6 and 4-wire phone cable. If you are using short range receiver (DVS-DR) to receive the DVI-D signal, the extended distance is similar to standard DVI-D cable; and if using long range receiver (DVIE-101R), the extended DVI-D distance can reach the distance up to 100m with 800x600 resolutions. You can use the audio receiver to extend audio over phone cable to provide a multimedia broadcasting.

Take the advantage of Cat5/5e/6 cable, DVS extender can simplify the installation, extend the AV signal, and centralize the multimedia server. Many nice features have been designed into these units; the single-port transmitter is the smallest one in the world and can connect to DVI port without using another DVI cable. For single port receiver, you can fix the unit very easily through its magnetic pad and optional metal plate. The multi-port unit is the first multi-port DVI extender over Cat5/5e/6, and you can use the rack mounting kit to the unit in an industrial cabinet.


DVS extender family is perfect for Digital Signage extension to display high resolution and crystallized image and easy to maintain and reduce installation cost.

### 3. Product Features


- Multiply one DVI-D and audio source to 2/4/8 DVI-D and audio outputs over Cat5/5e/6 and 4-wire phone cable
- **Video Amplifier Bandwidth:** 1.65GHz
- **Effective DVI-D extended distance and resolution:**
  - **DVI Input:** transmitting over standard DVI cable up to 10 meters
  - **DVI Output:** transmitting over standard DVI cable, DVI resolution 1920x1200@10m.
  - **RJ-45 Output and using short range receiver DVS-DR:** transmitting over Cat5/5e/6 cable, maximum DVI resolution 800x600@20m, 1024x768@15m, 1280x1024@10m
  - **RJ-45 Output and using long range receiver DVIE-101R:** transmitting over Cat5/5e/6 cable, maximum DVI resolution 800x600@100m, 1024x768@70m, 1280x1024@60m, 1920x1200@35m
- **DVI Input/Output Connector:** Type DVI-I, supports only DVI-D digital video signal
- **Audio type and distance:** Stereo can be transmitted over 4-wire phone cable over 100 meters. (Audio function is not included in DVIE-101T, so you will need to purchase a pair of DVS-AR to extend the audio source.)
- Input for one DVI-D + Audio, output for one DVI-D + audio connection and 1/2/4/8 sets of RJ-45 and RJ-11 connections to transmit DVI-D and audio signal using Cat5/5e/6 and 4-wire phone cable. (Audio function is not included in DVIE-101T)
- RJ-45 to DVI-D receiver (DVS-DR or DVIE-101R) in the DVI monitor or projector to receive the DVI-D signal from Cat5/5e/6 cable, and RJ-11 to Audio changer (DVS-AR) to receive the audio signal from 4-wire phone cable (Audio function not included in DVIE-101T)
- Receiver builds in DVI monitor's EDID simulation, computer can boot up DVI signal without connecting local monitor, initial pre-set range of frequency up to 1920x1200
- LED status to indicate the DVI activity
- Stackable capacity to expand the AV broadcasting
- Provides magnetic pad and attachable metal plate for single-port receiver to ease the installation

## 4. Panel Descriptions


### ■ DVS-102C 2-Port DVI-D Audio Splitter

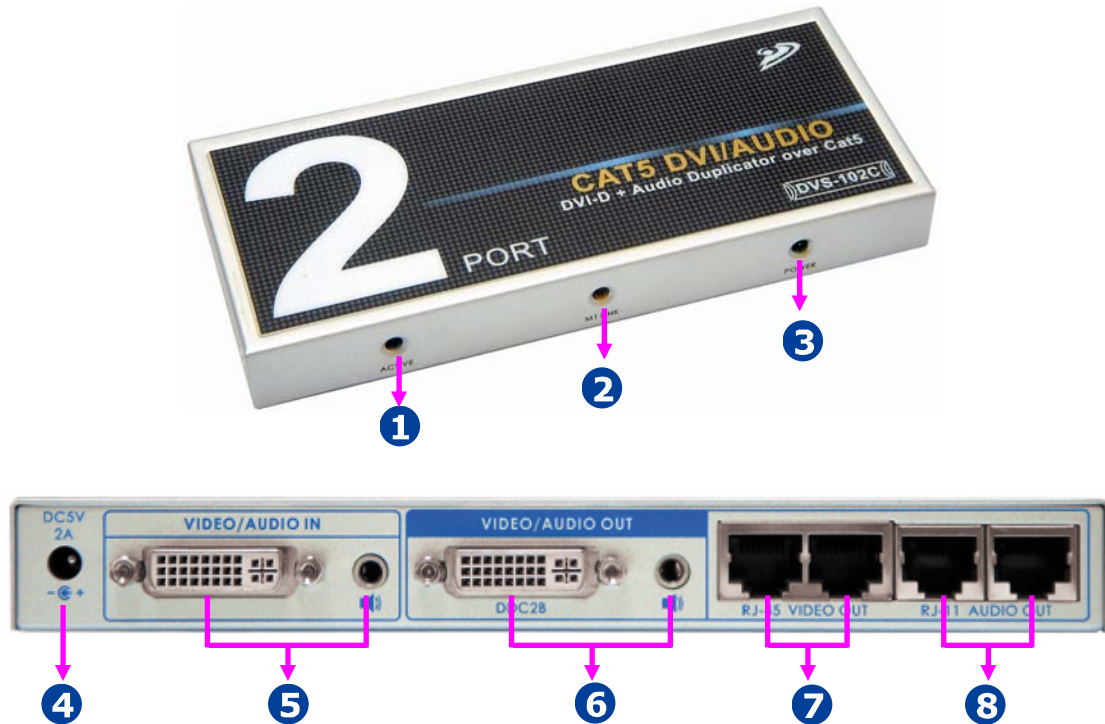

### ■ DVS-104C 4-Port DVI-D Audio Splitter

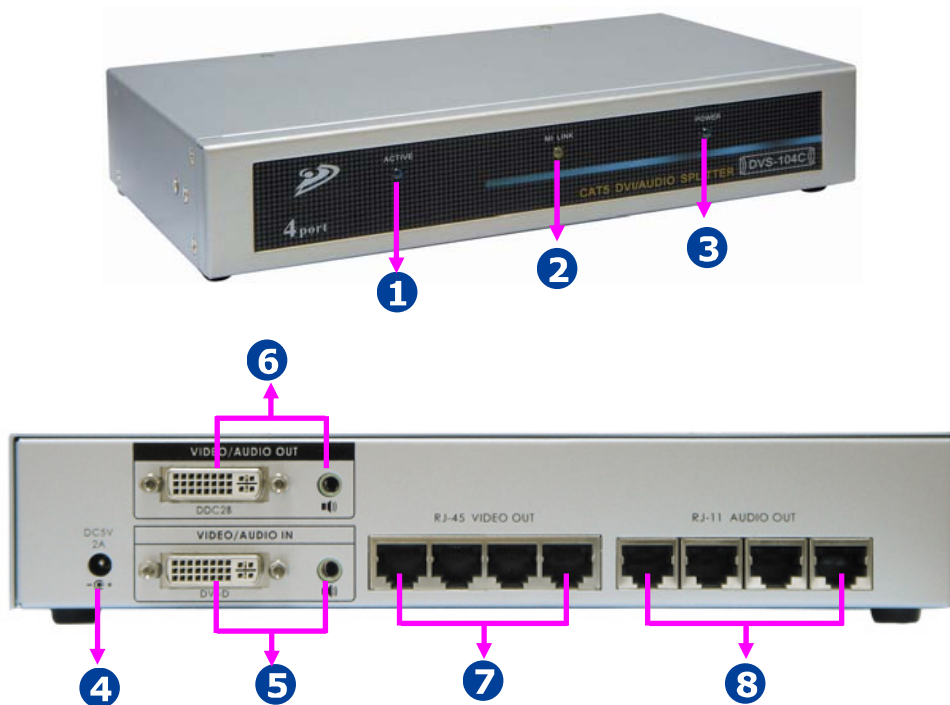


■ DVS-108C 8-Port DVI-D Audio Splitter

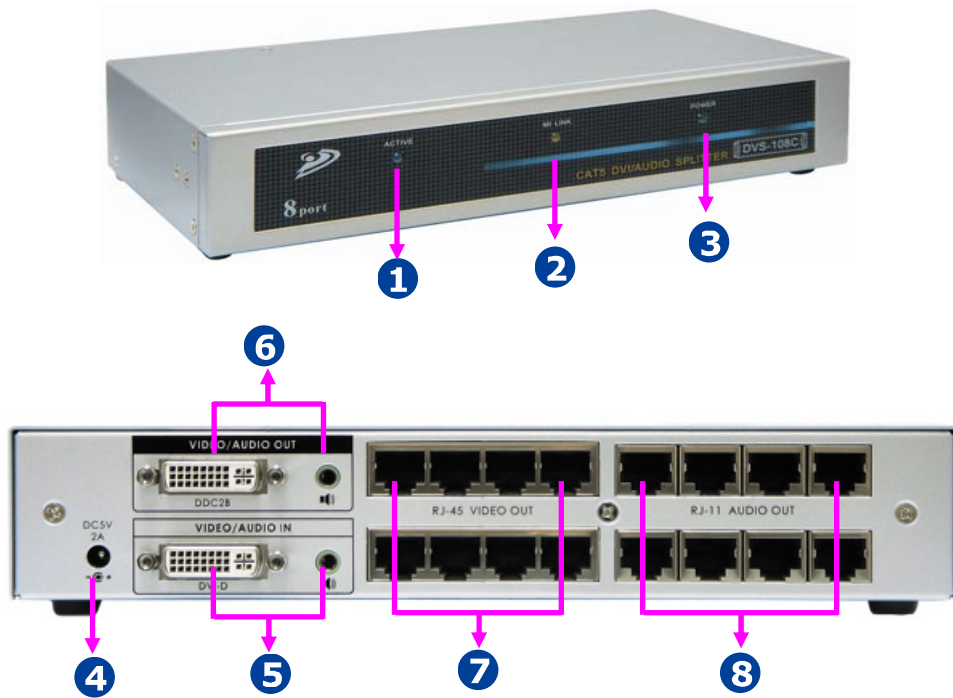

- 1 DDC2B Activity      2 Link of Local Monitor      3 Power Indicator
- 4 Power Jack      5 DVI + Audio Input      6 DVI + Audio Output
- 7 RJ-45 DVI Output      8 RJ-11 Stereo Output

■ Long Range DVI-D Receiver: DVIE-101R

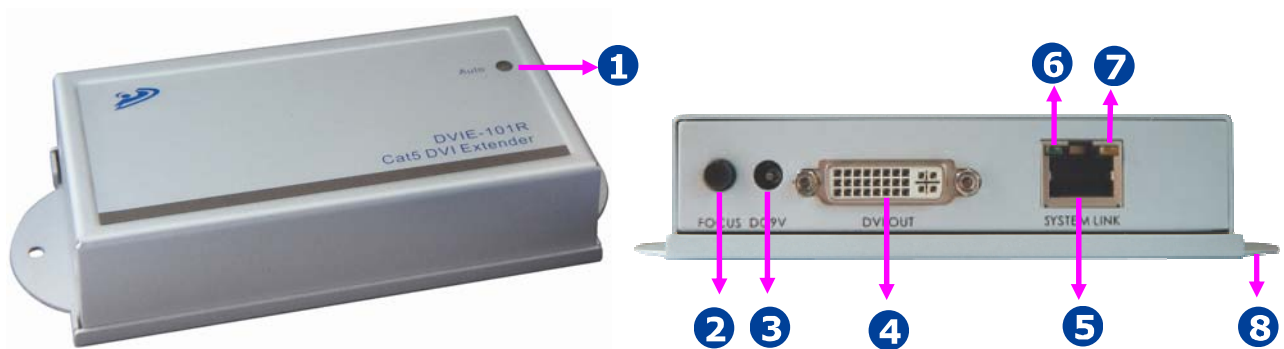

- 1 Auto EQ      2 Focus / EQ      3 Power Jack
- 4 DVI-D Output      5 RJ-45 DVI-D Input      6 DVI-D Activity
- 7 Power Indicator      8 Rack Mounting kit with Magnet

■ **One-Port Transmitter: DVIE-101T**



- ① DVI-D Input (to PC's DVI Port)
- ② Power Indicator (Orange LED)
- ③ DDC2B Activity (Green LED)
- ④ RJ-45 DVI-D Output

■ **Short Range DVI-D Receiver: DVS-DR**



- ① DVI-D Output (to Monitor)
- ② RJ-45 DVI-D Input

■ **DVS-AR Audio Receiver**



**RJ-45 to Stereo Adaptor**

■ **DVS-108AT DVI Integrated AV Cable 1.8M**



## 5. Installation and Operation

### 5.1 Install Single-Port Transmitter and Receiver:

- (1) **Basic Function Test:** In the beginning, please connect your DVI monitor to your PC or DVI player to confirm the basic display function and remain these devices turned on for next installation sequence.
- (2) **Install Single-Port Transmitter DVIE-101T:** Please connect DVIE-101T to your PC or DVI player's DVI output port (Your PC is still turned ON), the LED of DVIE-101T should all turn ON, the orange LED indicates the power ON status and the green LED indicates the DDC2B activity of DVI port. Please notice that the DVIE-101T has pre-set an EDID with a maximum DVI supporting frequency of 1920x1440 and can simulate the behavior of DVI monitor, so the PC's DVI port will remain activate even when you re-boot the PC without plug actual DVI monitor. The pre-set range should satisfy most of the application, if you would like to change the default range, please contact your supplier for more information.

Connect DVIE-101T to PC



- (3) **Install Short Range Receiver DVS-DR:** Please connect DVS-DR to your DVI monitor's DVI port directly. The DVI monitor can be PDP, LCD TV, projector or LCD. The supported DVI resolution and distance will be similar to regular DVI cable. If you are using long range receiver DVIE-101R, please refer to next section to install.


### DVI Projector & Monitor



Connect Short Range Receiver DVS-DR to DVI Monitor


**(4) Install Long Range Receiver DVIE-101R:**

- 1) Plug power adaptor to DVIE-101R, the orange LED above RJ-45 should turn ON to indicate the power on status. The other LED should turn off, since there is no input of video signal from "SYSTEM LINK" port.
- 2) The "STATUS" led in the front panel will turn ON as the EQ/FOCUS control switch to the left end and the EQ/FOCUS will stay on AUTO, this will not function until the receiver received video signal from "SYSTEM LINK" port.

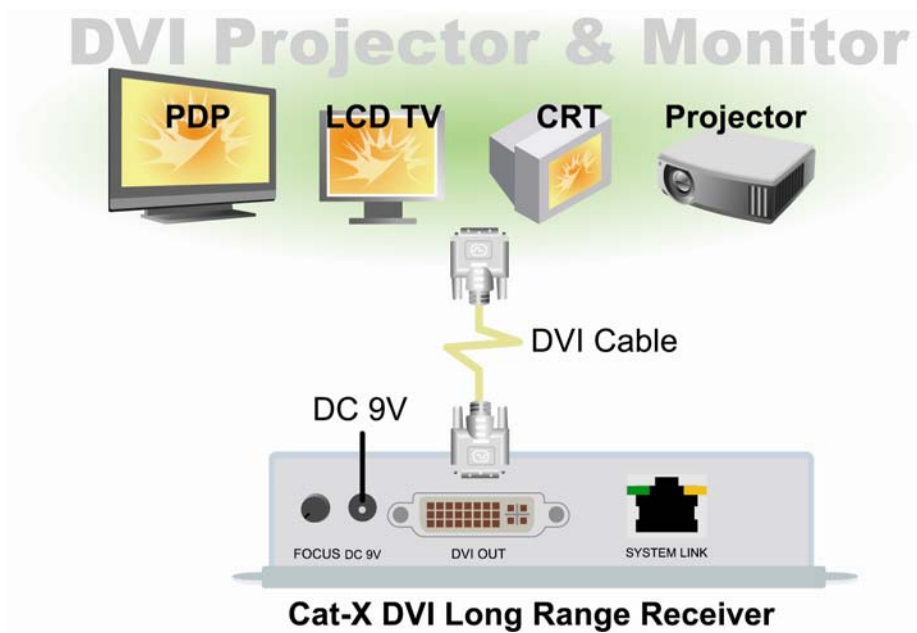


**Connect DVIE-101R to DVI Monitor by DVI Cable**

- (5) Selection of Cat5/5e/6 cable:** You may use most of current Cat5/5e/6 cables, and since the quality varies, we do encounter some cables not perform well, even it is expensive. Therefore, please test your current cables before you installing the devices on the site. For some environment need to prevent potential interference, the FTP type cable is recommended. The connector must be made by 568B/568B type. The EIA/TIA definition of 568B in the pin assignment is (1)orange white, (2)orange, (3)green white, (4)blue, (5)blue white, (6)green, (7)brown white, and (8)brown.

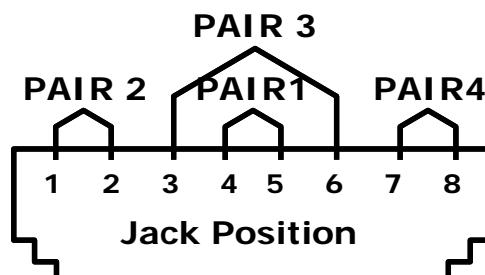


- (6) **Connect Cat5/5e/6 cable:** Plug two ends of cable to Transmitter and Receiver's RJ-45 "SYSTEM LINK" port, the Receiver's connected monitor should display now and the green LED above DVIE-101R's RJ-45 port should turn ON to reflect the DVI signal activation. For DVIE-101R, you can manually adjust the EQ/FOCUS to have the best DVI display. The displayed DVI resolution will also relate to the distance been extended, it will be better to test prior actual installation and should not exceed the suggested frequency and corresponding distance.

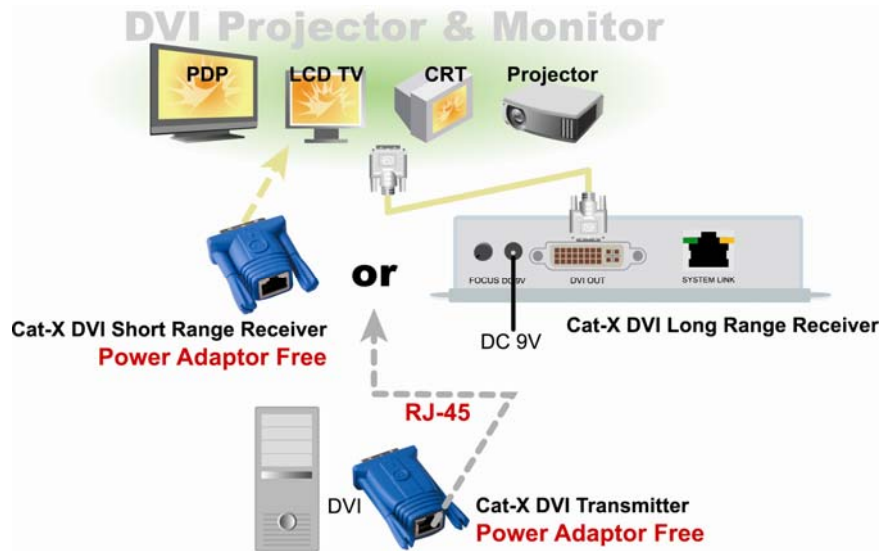

**Connection of Single-Port DVI-D Extender**


- (7) **Extend Audio Signal:** There is no audio function in the one-port mode, so you need to use a pair of DVS-AR to extend the audio and the cable using is 4-wire phone cable and two ends of the cable should be made by straight RJ-11 connector.

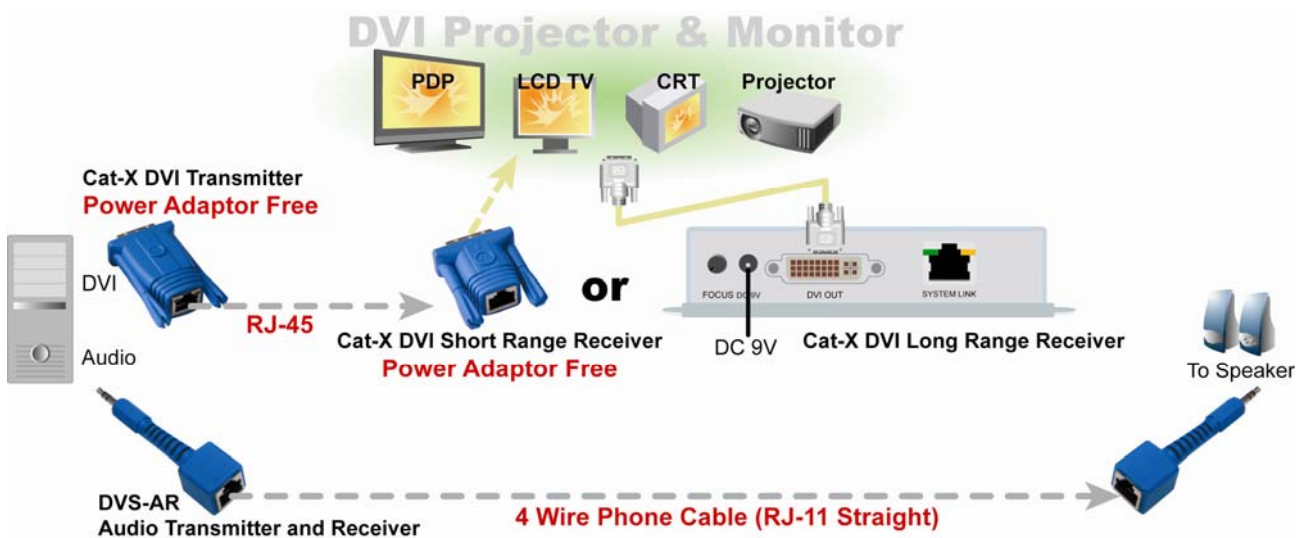

**Extended Connection of DVI-D with Audio**

## 5.2 Install Multi-Port Transmitter:

- (1) The 2/4/8-port model will all act the same except they have different amount of outputs.
- (2) **First Time Set-up:** Please turn off the DVI output device (PC or DVD Player) and monitors.
- (3) Connect local DVI monitor and speaker to the "VIDEO/AUDIO OUT" of the transmitter and take one DVI integrated cable (DVS-180AT), plug DVI end to "VIDEO/AUDIO IN" port of transmitter and the other end of the cable to PC's DVI-D video and speaker ports.
- (4) Connect power adaptor.
- (5) Turn on your DVI output device and monitor to confirm the function of display. The "LINK" LED of the transmitter should turn orange to reflect the connection of a local DVI monitor and the "ACTIVE" LED should turn blue to indicate an activated DVI-D signal.
- (6) The transmitter has built in an EDID simulator, when you connect local DVI monitor, the transmitter will automatically record the EDID from DVI monitor. When you not connecting DVI monitor locally, the transmitter will simulate the EDID communication like a regular monitor and activate the DVI signal of PC.

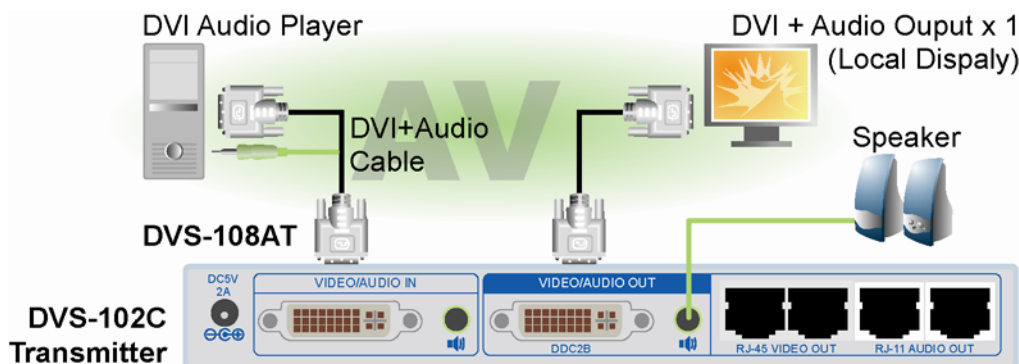


Local Connection of 2-Port Transmitter

## 5.3 To connect monitors and speakers through RJ-45 and RJ-11 ports:

- (1) You can refer to previous section for Receiver to install and prepare the cable to be connected.

- (2) **RJ-45 VIDEO with Short Range Receiver DVS-DR:** The RJ-45 ports in the back of Transmitter can only support DVI-D signal. For each connector, please prepare one Cat5/5e/6 cable and make the cable as 568B/568B type [more details about Cat5/5e/6 cable, please refer to previous section of 1. (3) ~ (6)], and plug one end of the cable to the "RJ-45 VIDEO" port and the other end to the "RJ-45" port of DVSDR and connect "DVS-DR" to the DVI monitor. If the video connection is HDMI type, you will need to use appropriate DVI-HDMI adaptor to connect. The supported DVI-D resolution and distance is similar to using regular DVI cable, the estimated ranges are: 800x600@20m, 1024x768@15m, 1280x1024@10m. Previous range can be applied in most of the application, but in some cases it might change. It will be appropriate to test the capacity of display before installation.
- (3) **RJ-45 VIDEO with Long Range Receiver DVIE-101R:** Please refer to previous section 1.(4) ~ (6) to install DVIE-101R and cable. If the video connection is HDMI type, you will need to use appropriate DVI-HDMI adaptor to connect. The supported DVI-D resolution and distance is similar to regular DVI cable, the estimated ranges are: 800x600@100m, 1024x768@70m, 1280x1024@60m, 1920x1200@35m. Previous range can be applied in most of the application, but in some cases it might change. It will be appropriate to test the capacity of display before installation.
- (4) **RJ-11 AUDIO:** The RJ-11 ports in the back of transmitter support stereo audio and for each connector. Please prepare one 4-wire phone cable or use 4 wires out of the Cat5/5e/6 cable to make the RJ-11 connector. The pin definition of RJ-45 is one to one and the supported length is greater than 50 meters (longer than the supported length of DVI-D)

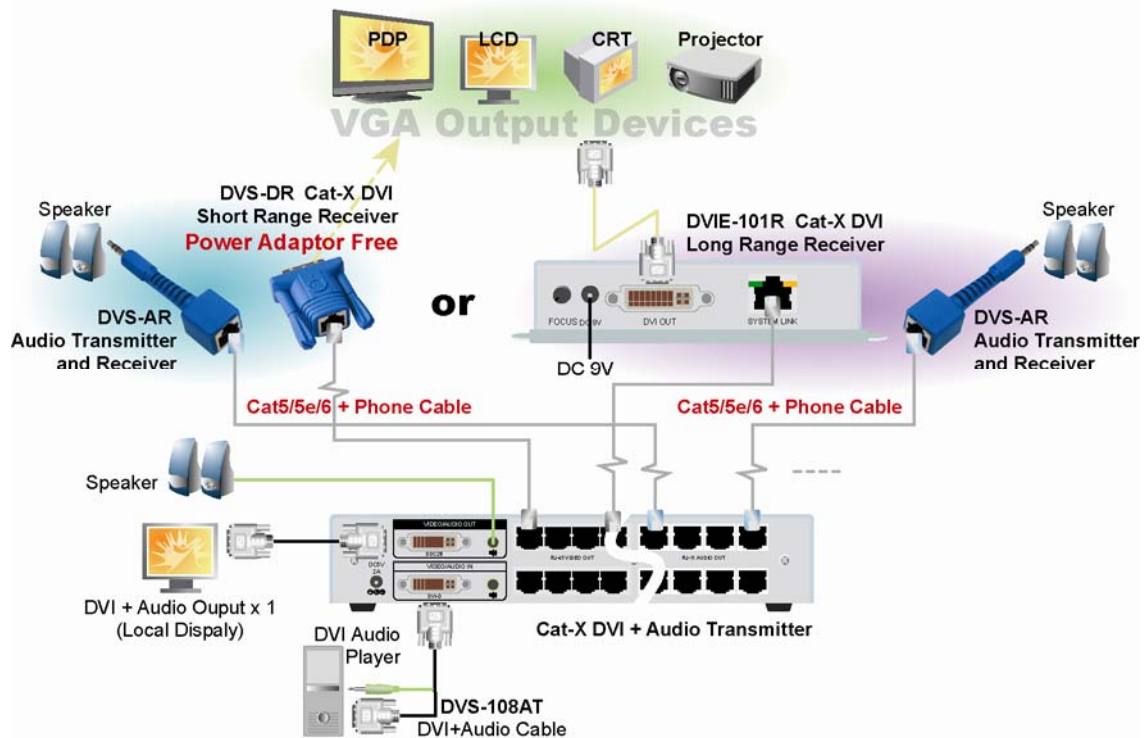


**Connection of Multi-Port DVI-D + Audio Transmitter**

## 5.4 Stack More Transmitters to Have More Displays:

(1) If you would like to broadcast more monitors and speakers, you can connect another layer of same series Cat5/5e/6 DVI-D + Audio Transmitter. You can connect additional Transmitter from "VIDEO/AUDIO IN" port or "RJ-45 VIDEO and RJ-11 AUDIO" ports:

- 1) **From "VIDEO/AUDIO OUT"**: Use one set of standard DVI/Audio cable, one end connect from the "VIDEO/AUDIO OUT" port of the first layer's Transmitter and the other end to "DVI/AUDIO IN" port of the second layer's Transmitter. (Refer to following connection )
- 2) **From "RJ-45 VIDEO and RJ-11 AUDIO"**: Similar to the way of connecting monitor and speaker, you connect DVS-DR and DVSAR to the "VIDEO/AUDIO IN" port of the second layer's Transmitter. The length for this extension should be between 10 to 25 meters and the total extended length and resolution is about 800x600@20m, 1024x768@15m, 1280x1024@10m. Previous range can be applied in most of the application, but in some cases it might change. It will be appropriate to test the capacity of display before installation.

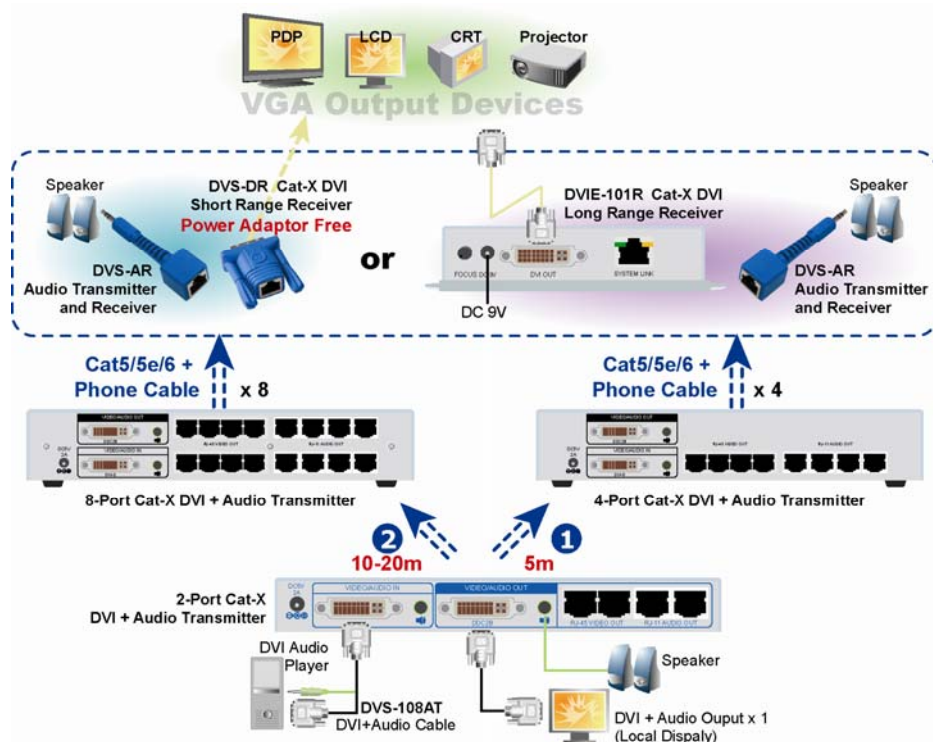

### Diagram of Connecting another Layer of Cat5/5e/6 DVI-D Transmitter

(2) To ensure the transmitting quality of DVI-D signal, more than two layer of stacking is not recommended.

(3) The transmitter can be 2, 4, or 8 port model.

## 6. Specifications

Model Name		2-Port DVI-D + Audio Transmitter	4-Port DVI-D + Audio Transmitter	8-Port DVI-D + Audio Transmitter
Model No.		DVS-102C	DVS-104C	DVS-108C
Input		DVI Female x 1, Audio x 1		
Output		DVI Female x 1 Audio x 1 RJ-45 x 2 RJ-11 x 2	DVI Female x 1 Audio x 1 RJ-45 x 2 RJ-11 x 2	DVI Female x 1 Audio x 1 RJ-45 x 2 RJ-11 x 2
RJ-45 to DVI-D Receiver (DAS-DR) and RJ-11 to Audio Receiver (DAS-AR)		2 sets	4 sets	8 sets
Max Distance and Resolution	DVI Input	Transmitting over standard DVI cable up to 10 meters		
	DVI Output	Transmitting over standard DVI cable, DVI resolution 1920x1200@10m		
	RJ-45 Output	Transmitting over Cat5/5e/6 cable, DVI resolution for Short Range Receiver is 800x600@20m, 1024x768@15m, 1280x1024@10m; for Long Range Receiver is 800x600@100m, 1024x768@70m, 1280x1024@60m, 1920x1200@35m		
Signal Type		DVI-D		
Power Consumption		DC 5V, 800mA	DC 5V, 1000mA	DC 5V, 1200mA
Housing		Metal		
Dimension (LxWxH)		194x87x24 mm	240x130x44 mm	

Model Name	Cat-X DVI Transmitter	Cat-X DVI Receiver	Cat-X DVI Receiver
Model No.	DVIE-101T	DVIE-101R	DVIE-DR
Input	DVI Male x 1	RJ-45 x 1	RJ-45 x 1
Output	RJ-45 x 1	DVI Male x 1	DVI Male x 1
Signal Type	DVI-D		
Max. Distance and Resolution	Connect the DVI Receiver	Long Range Receiver 800x600@100m, 1024x768@70m, 1280x1024@60m, 1920x1200@35m	Short Range Receiver 800x600@20m, 1024x768@15m, 1280x1024@10m
Power Consumption	-	DC 9V	-
Housing	Plastic	Metal	Plastic
Dimension (LxWxH)	58x40x17 mm	113x62x29 mm	42x40x18 mm

## **7. Remarks**

- I. Before operating this system, please read operation manual carefully.
- II. Please use correct power adapter and use high quality cable for optimum broadcasting.
- III. To prevent potential power damage, please don't use 2-wire extension cord and ensure AC outlets at relative devices on the same electronic phase and have correct grounding.
- IV. Limited Warranty:
  - (1) In no events shall the vendor's liability for direct or indirect, special, incidental or consequential damages, loss of profit, loss of business, or financial loss which may be caused by the use of the product exceeds the price paid for the product.
  - (2) The vendor makes no warranty or representation, expressed or implied with respect to the contents or use of this documentation, and especially disclaims its quality, performance, merchantability, or fitness for any particular purpose.
  - (3) The vendor also reserves the right to revise or update the product or documentation without obligation to notify any user of such revisions or updates. For further information please contact your vendor.

## **8. Notice**

1. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.
2. Specifications are subject to change without notice.
3. Please read user manual carefully before operating the device
4. Please use the power adaptor accompanied with this product. Warranty does not cover for damages caused by pairing other power adaptor
5. Please check all connecting devices are properly grounded to avoid electric failure
6. This product has limited warranty for one year from defects in material and workmanship. Items that are physically damaged, misused, tempered with or altered are void of warranty. For further details please contact your distributor. In case warranty sticker is damaged or missing, warranty is void. For further details please contact your distributor.

## Certifications

### FCC

This equipment has been tested and found to comply with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### CE

This equipment is in compliance with the requirements of the following regulations:

EN 55022: CLASS B

### RoHS

All contents of this package, including products, packing materials and documentation comply with RoHS.



© 2009 by Green-Box

Green-Box Technology Co. Ltd. reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of Green-Box Technology Co. Ltd.

P/N: CDDMDVS1C000A0